


When a sensor's batteries are low, the panel displays a low battery alert for the sensor (unless this trouble condition has been disabled for the panel display).

1. Carefully slide the front of the Image Sensor up off of the sensor's back.
 - o The entire Image Sensor back and mounting arm does not need to be removed or dismantled.

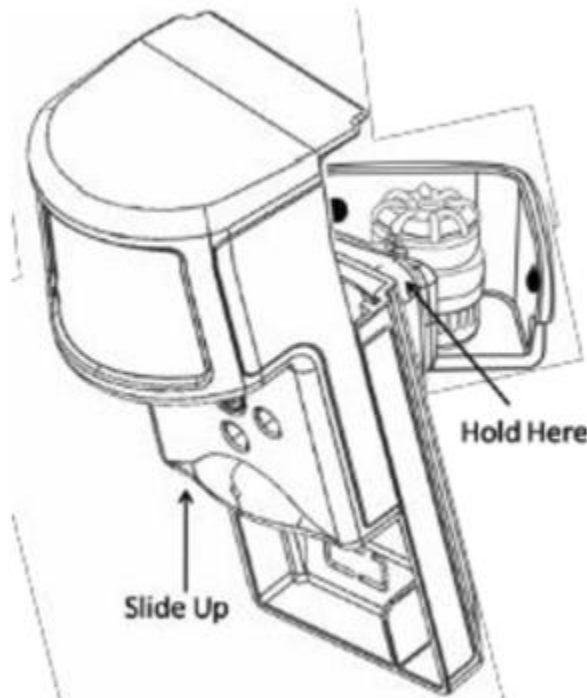

2. Replace the Image Sensor batteries with 2 AA 1.5v Energizer Ultimate Lithium batteries to maximize battery life.
 - o Using standard alkaline batteries greatly reduces the life of the batteries.
 - If the battery type is switched between Ultimate Lithium and Alkaline, verify the battery type is also updated on Alarm.com. This ensures accurate low battery reporting.
 - The operation of the sensor with alkaline batteries has not been verified for compliance with UL standards.
3. Dispose of the used batteries according to the battery manufacturer instruction or following local regulations.